
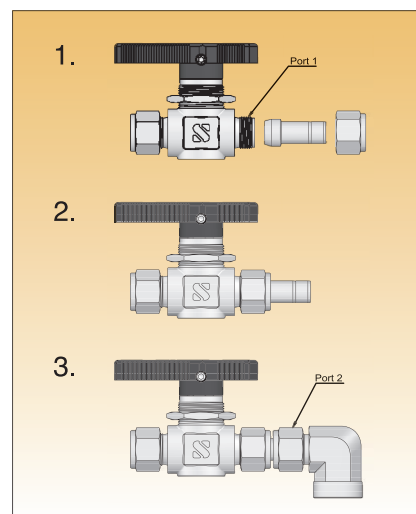


Port Connector

SCP

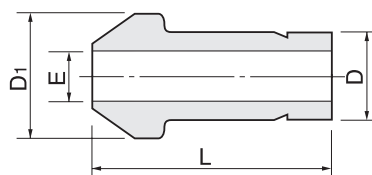

S-LOK port connector facilitates close connection to another port.

Installation Instructions

1. Remove the nut and ferrules from S-LOK port 1 and set nut only(no ferrules) over the port connector
2. Tighten the nut with wrench until sharp rise in torque is felt
3. Insert the other end of port connector into port 2 and tighten nut 1-1/4 turns with wrench. for 1/8", 3mm only 3/4 turn from finger tight.

Connects two fractional S-LOK ports

Part No.	Tube O.D		E	D ₁	L
	in	mm	Min		
SCP-1	1/16	1.59	1.00	3.30	13.72
SCP-2	1/8	3.17	2.03	6.09	22.35
SCP-4	1/4	6.35	4.31	9.39	24.64
SCP-5	5/16	7.93	5.58	10.92	25.90
SCP-6	3/8	9.52	6.86	12.70	26.16
SCP-8	1/2	12.70	9.40	15.74	35.81
SCP-12	3/4	19.05	14.73	22.09	37.33
SCP-16	1	25.40	20.32	28.44	48.00

Connects two metric S-LOK ports

Part No.	Tube O.D	E	D ₁	L
	D	Min		
SCP-3M	3	1.9	6.0	22.2
SCP-4M	4	2.2	7.0	25.8
SCP-6M	6	4.1	9.0	24.6
SCP-8M	8	5.6	11.0	27.2
SCP-10M	10	7.1	13.1	26.1
SCP-12M	12	8.8	15.0	35.8
SCP-15M	15	11.2	19.0	37.4
SCP-16M	16	12.0	19.0	37.4
SCP-18M	18	13.9	21.0	37.4
SCP-20M	20	15.5	23.0	38.9
SCP-22M	22	17.9	25.0	39.2
SCP-25M	25	19.9	28.0	48.0
SCP-28M	28	22.5	34.3	63.5
SCP-32M	32	26.5	39.5	69.7
SCP-38M	38	31.6	47.1	81.9